


PAVEEZZI COMPOSITES™

Modern Style Wall Cladding Installation


Section	Item No.	Purpose
	GW908	Wall Cladding
	GW912	F-Trim, used as the first and last board
	GW913	Outside Corner Trim, used on the outside corners
	GWA026	Used at every joist to fix each board to the joist
	GWA029	Aluminium support for face fixing when finishing at the inside corner
	GWA008	Used for fixing the joist
	GWA009	SS304 screw

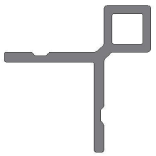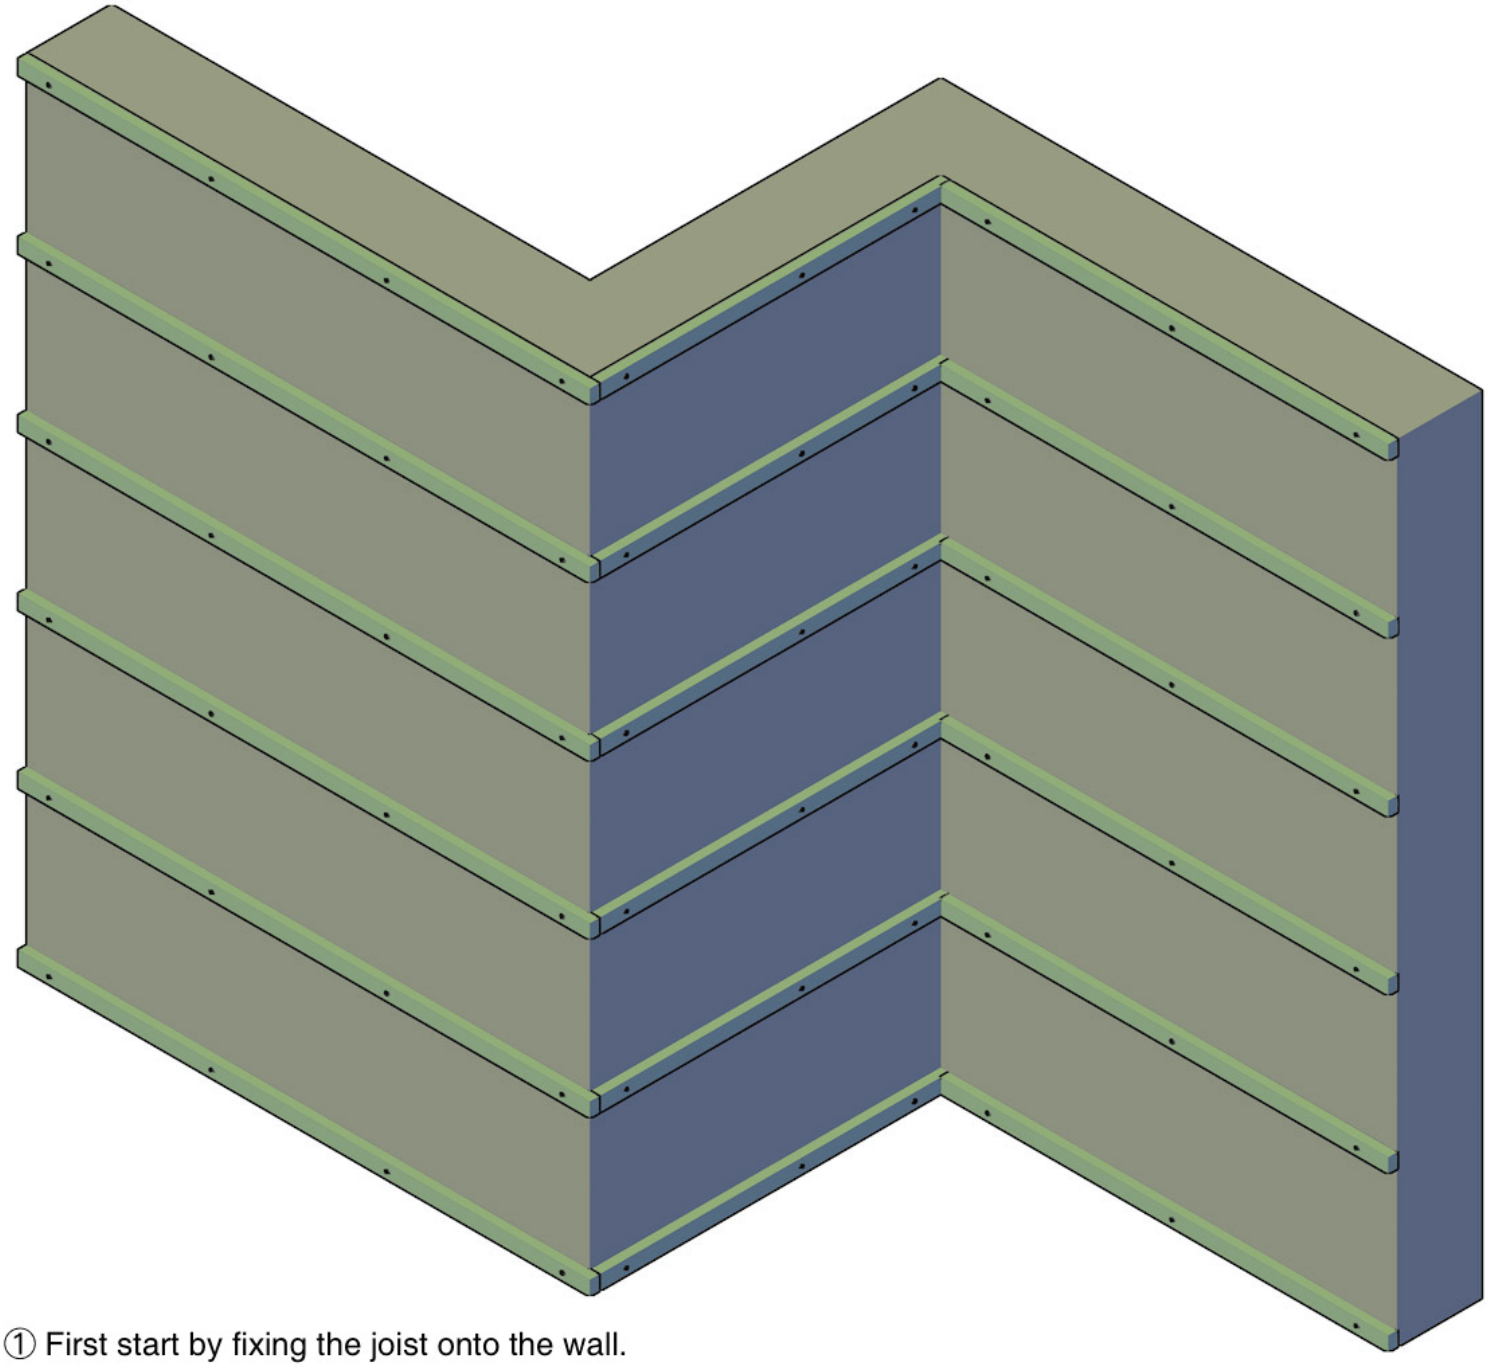


① First start by fixing the joist onto the wall.

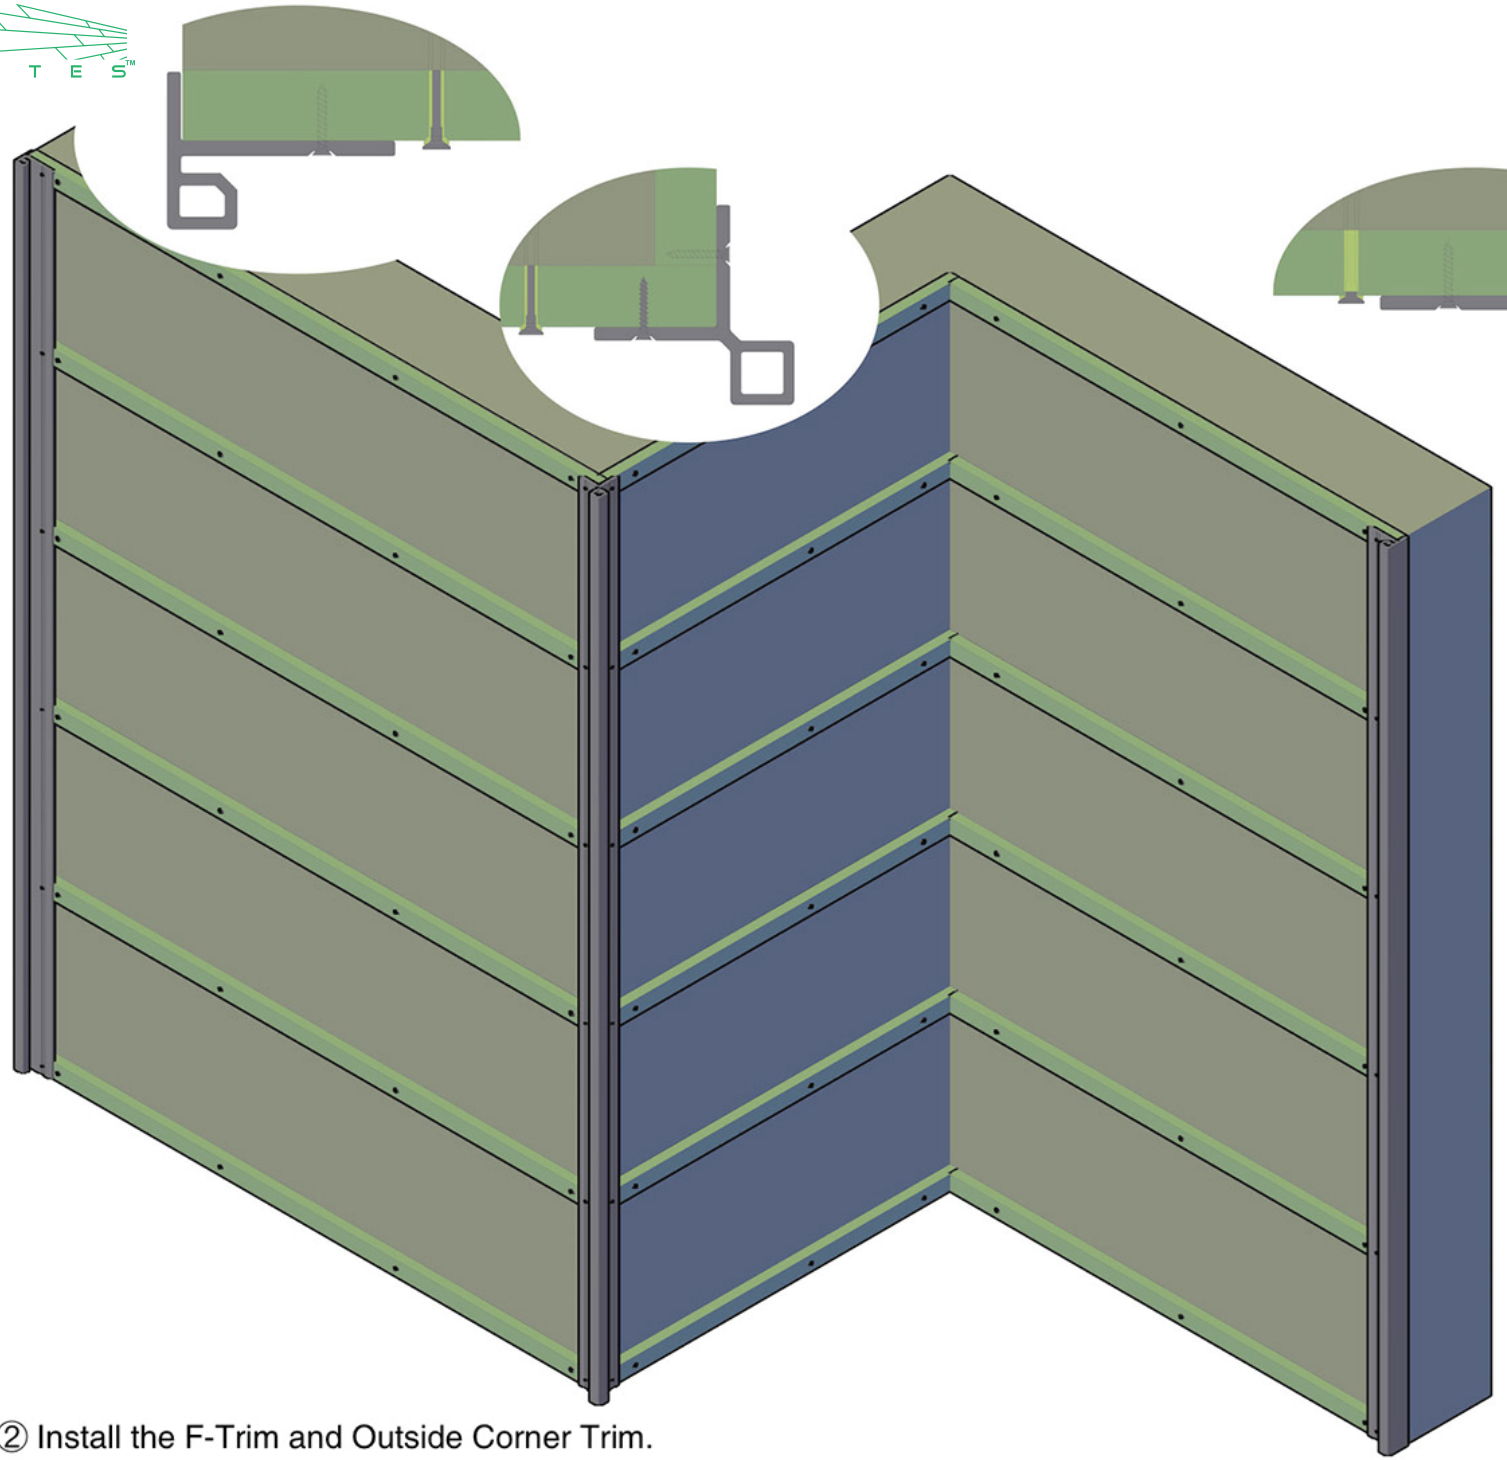


② Install the F-Trim and Outside Corner Trim.

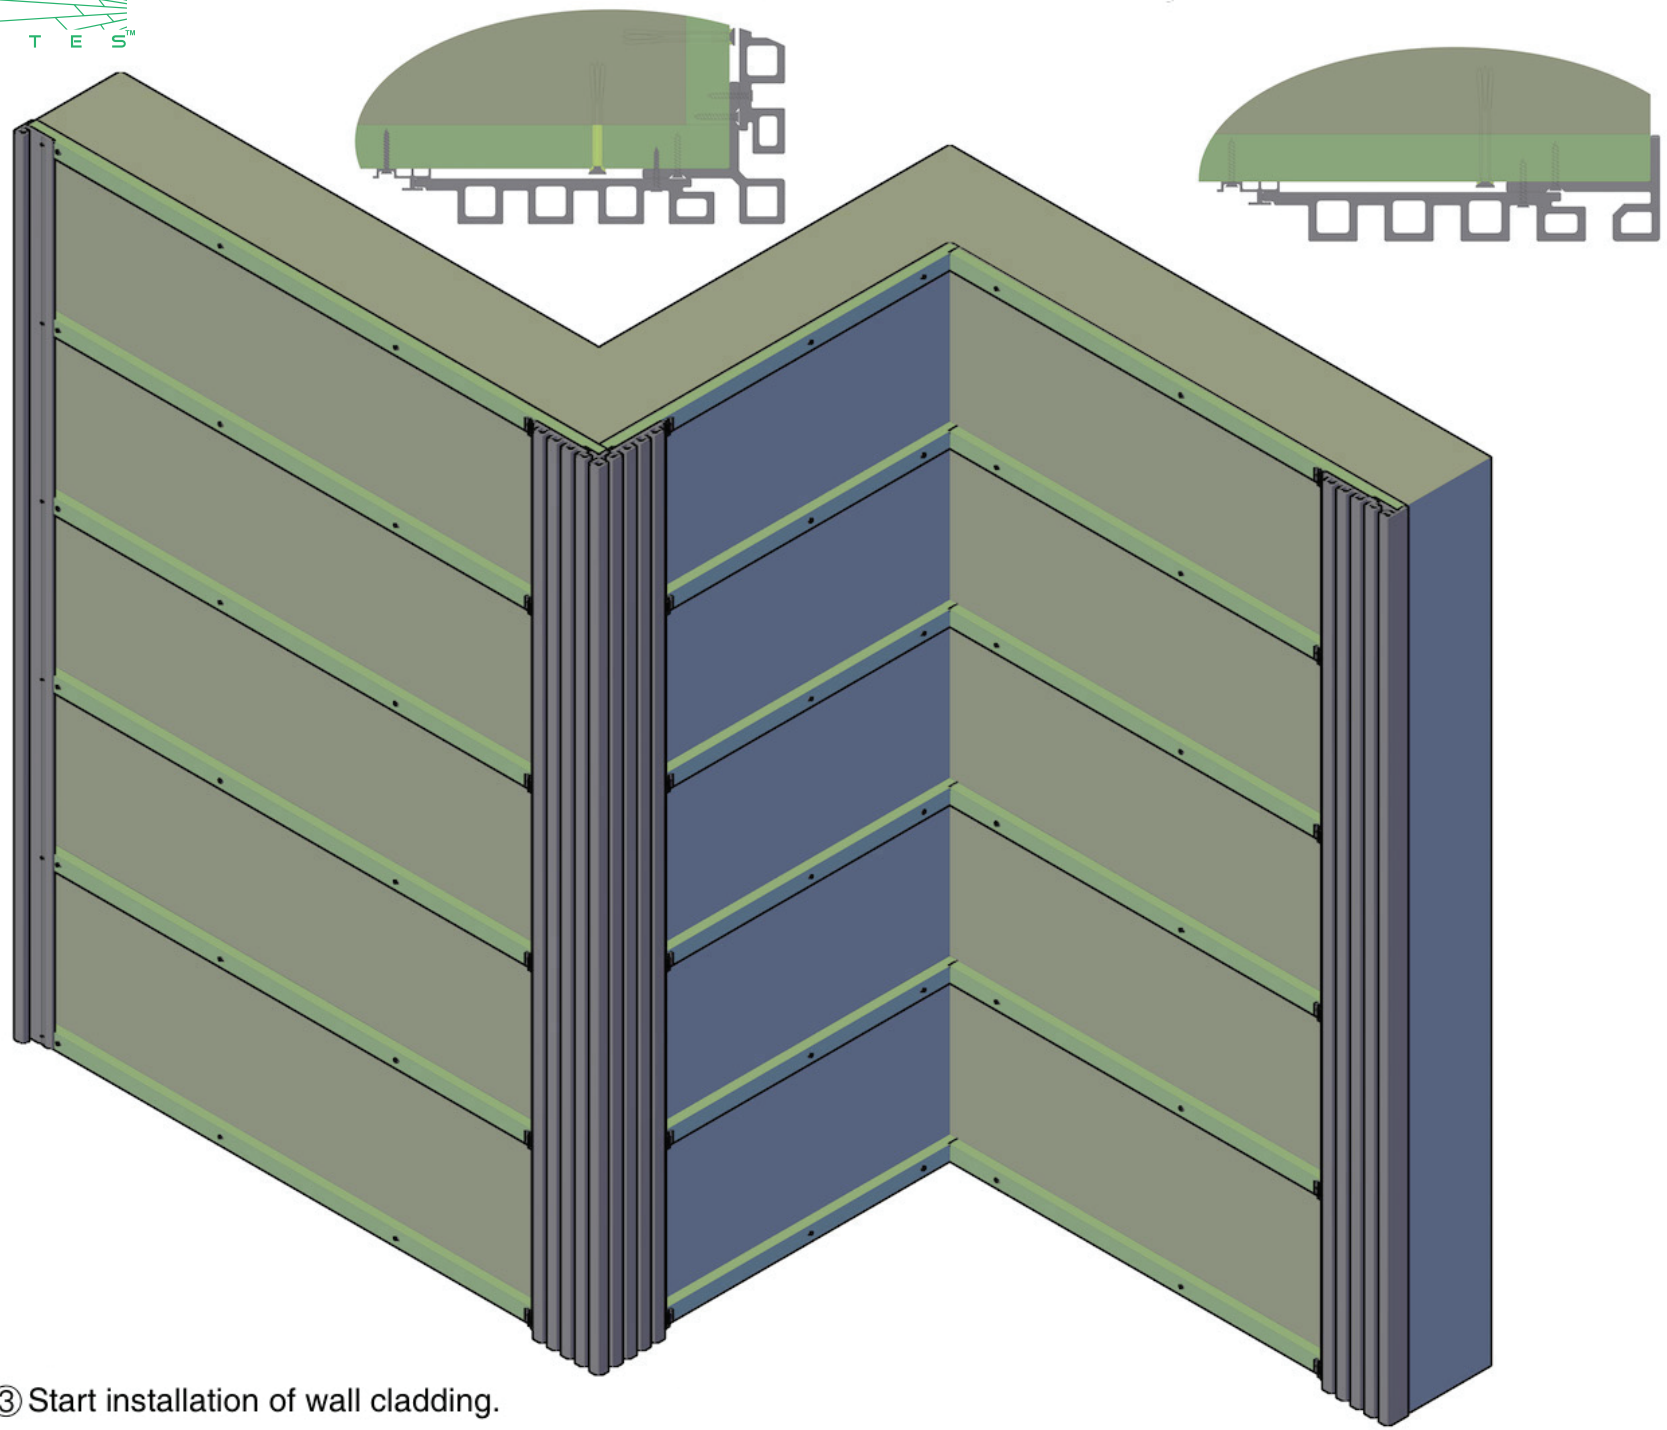


③ Start installation of wall cladding.

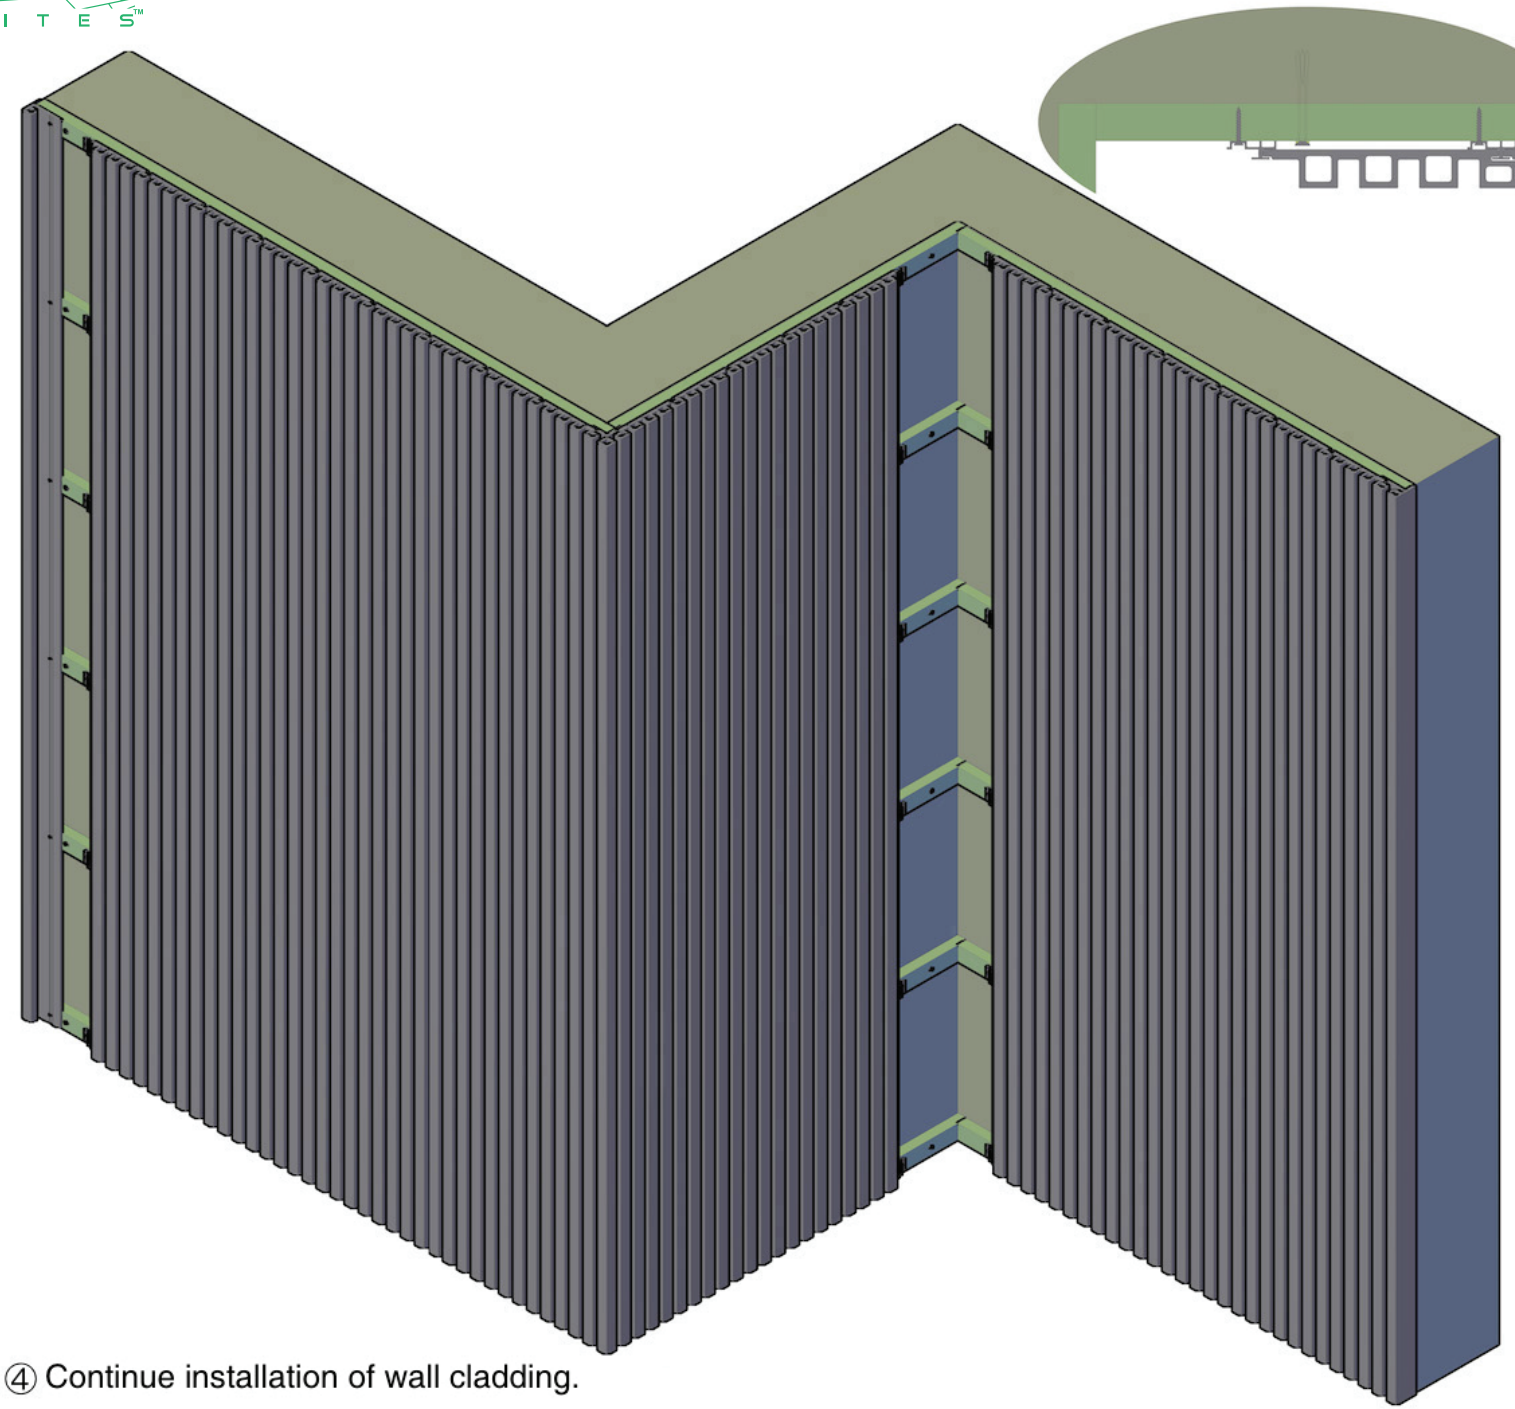


④ Continue installation of wall cladding.

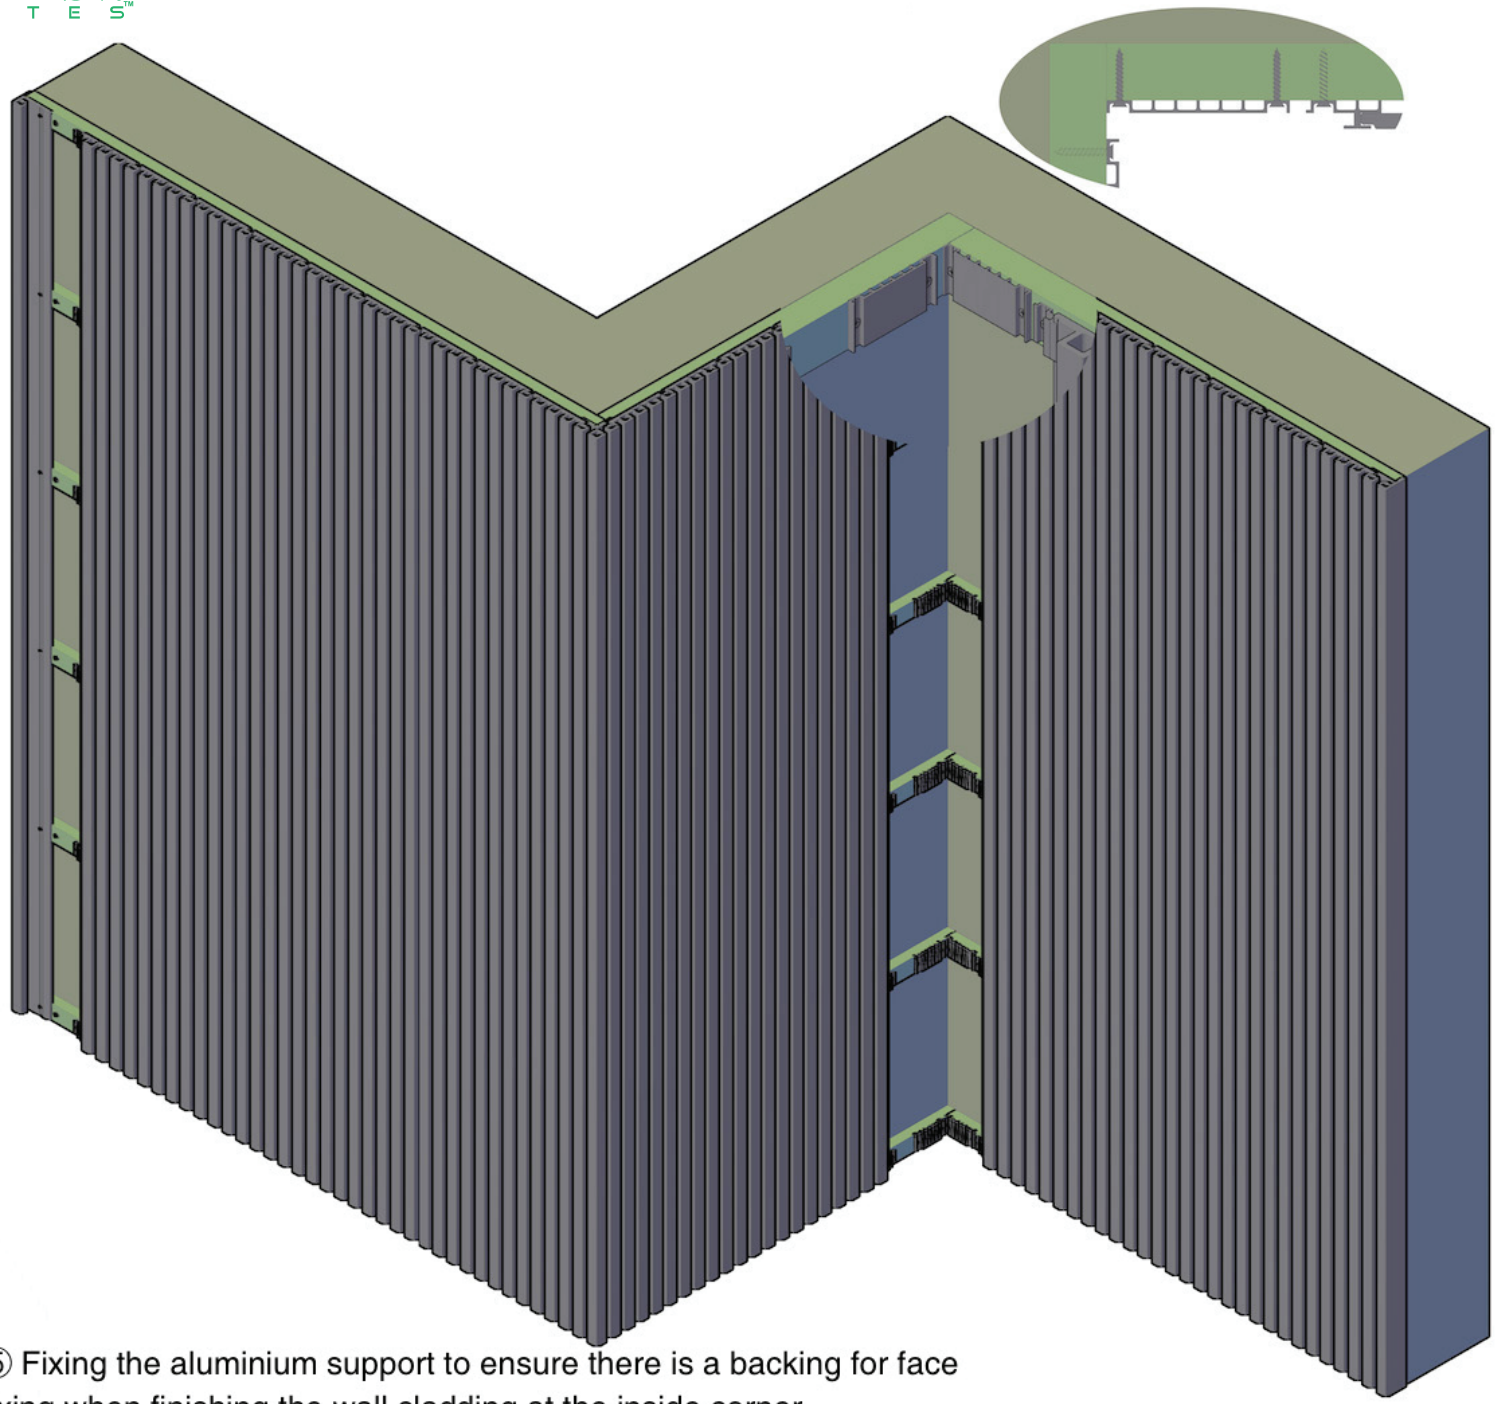


⑤ Fixing the aluminium support to ensure there is a backing for face fixing when finishing the wall cladding at the inside corner.

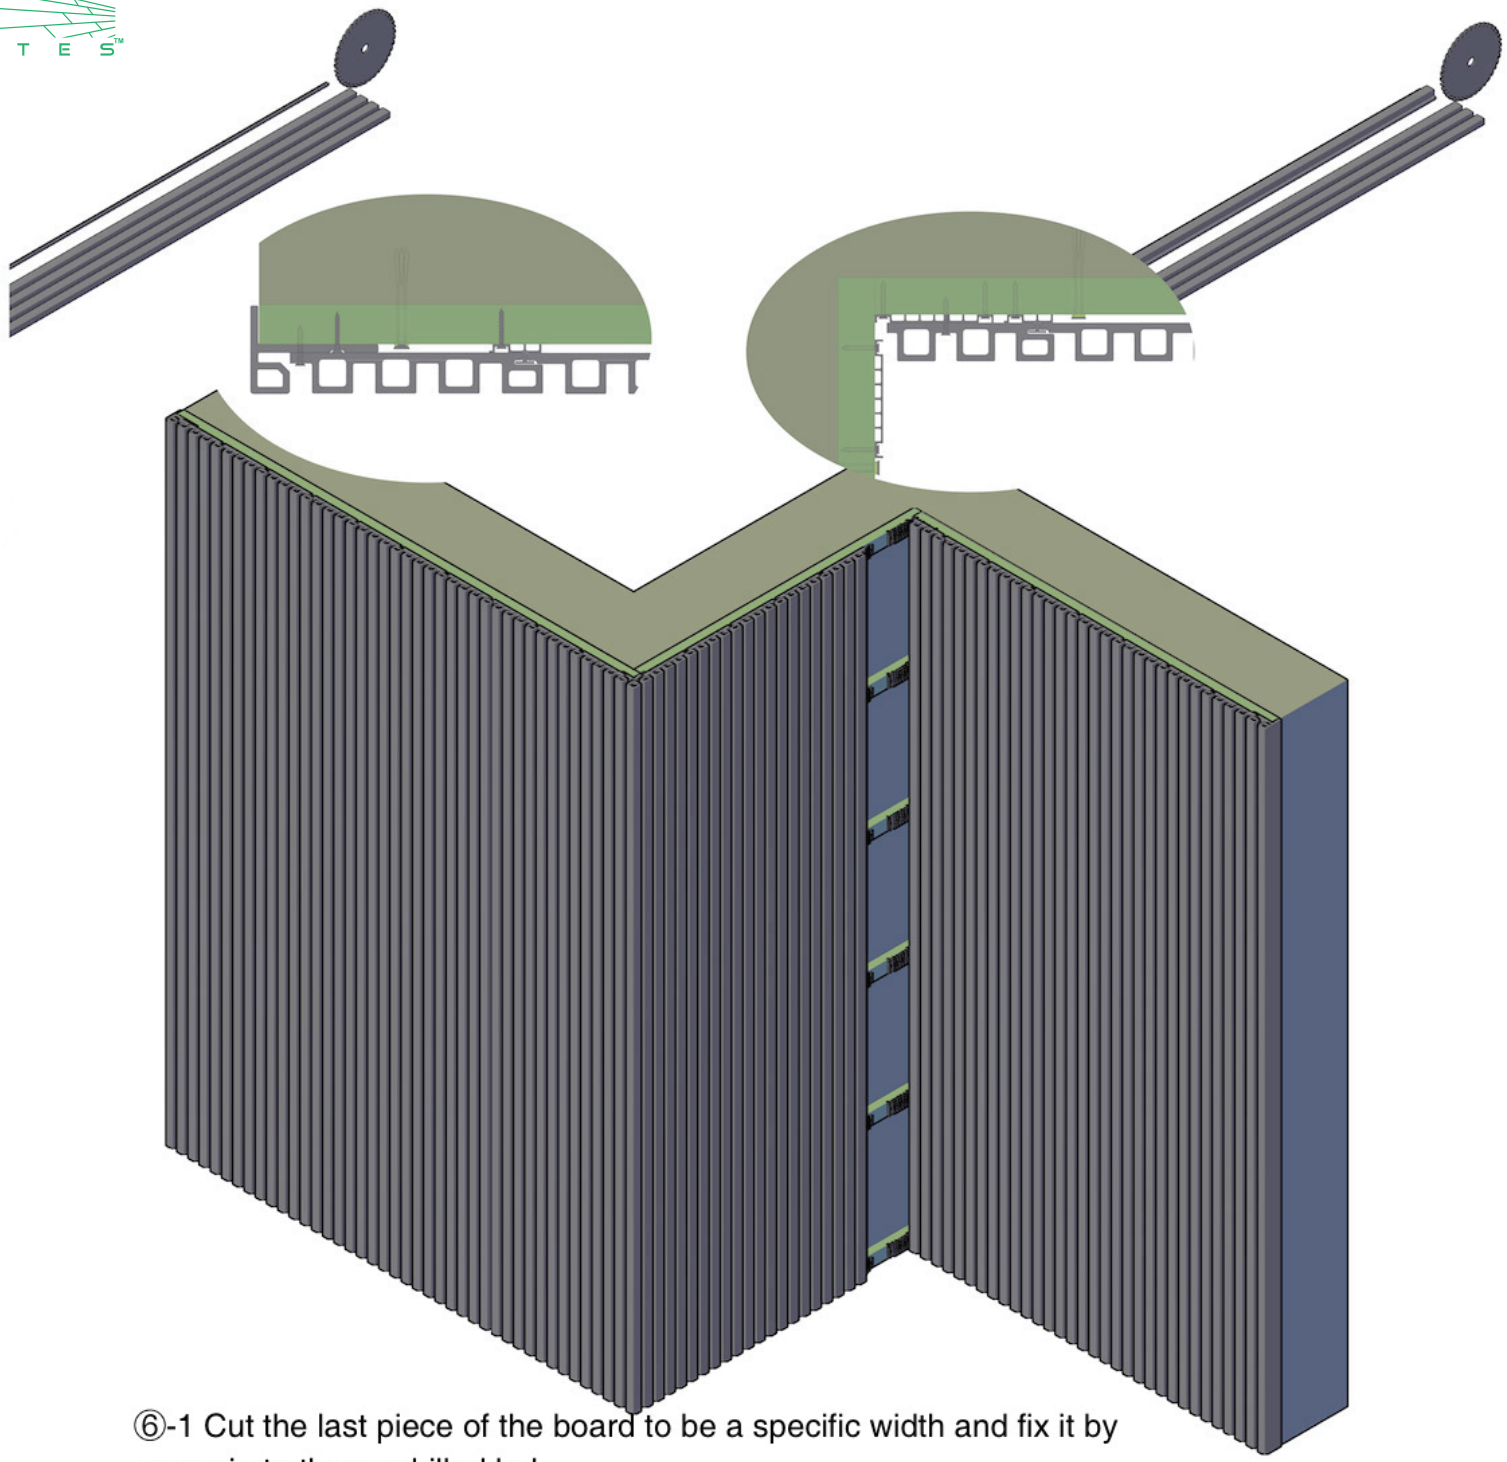

⑥-1 Cut the last piece of the board to be a specific width and fix it by screw-in to the predrilled hole.

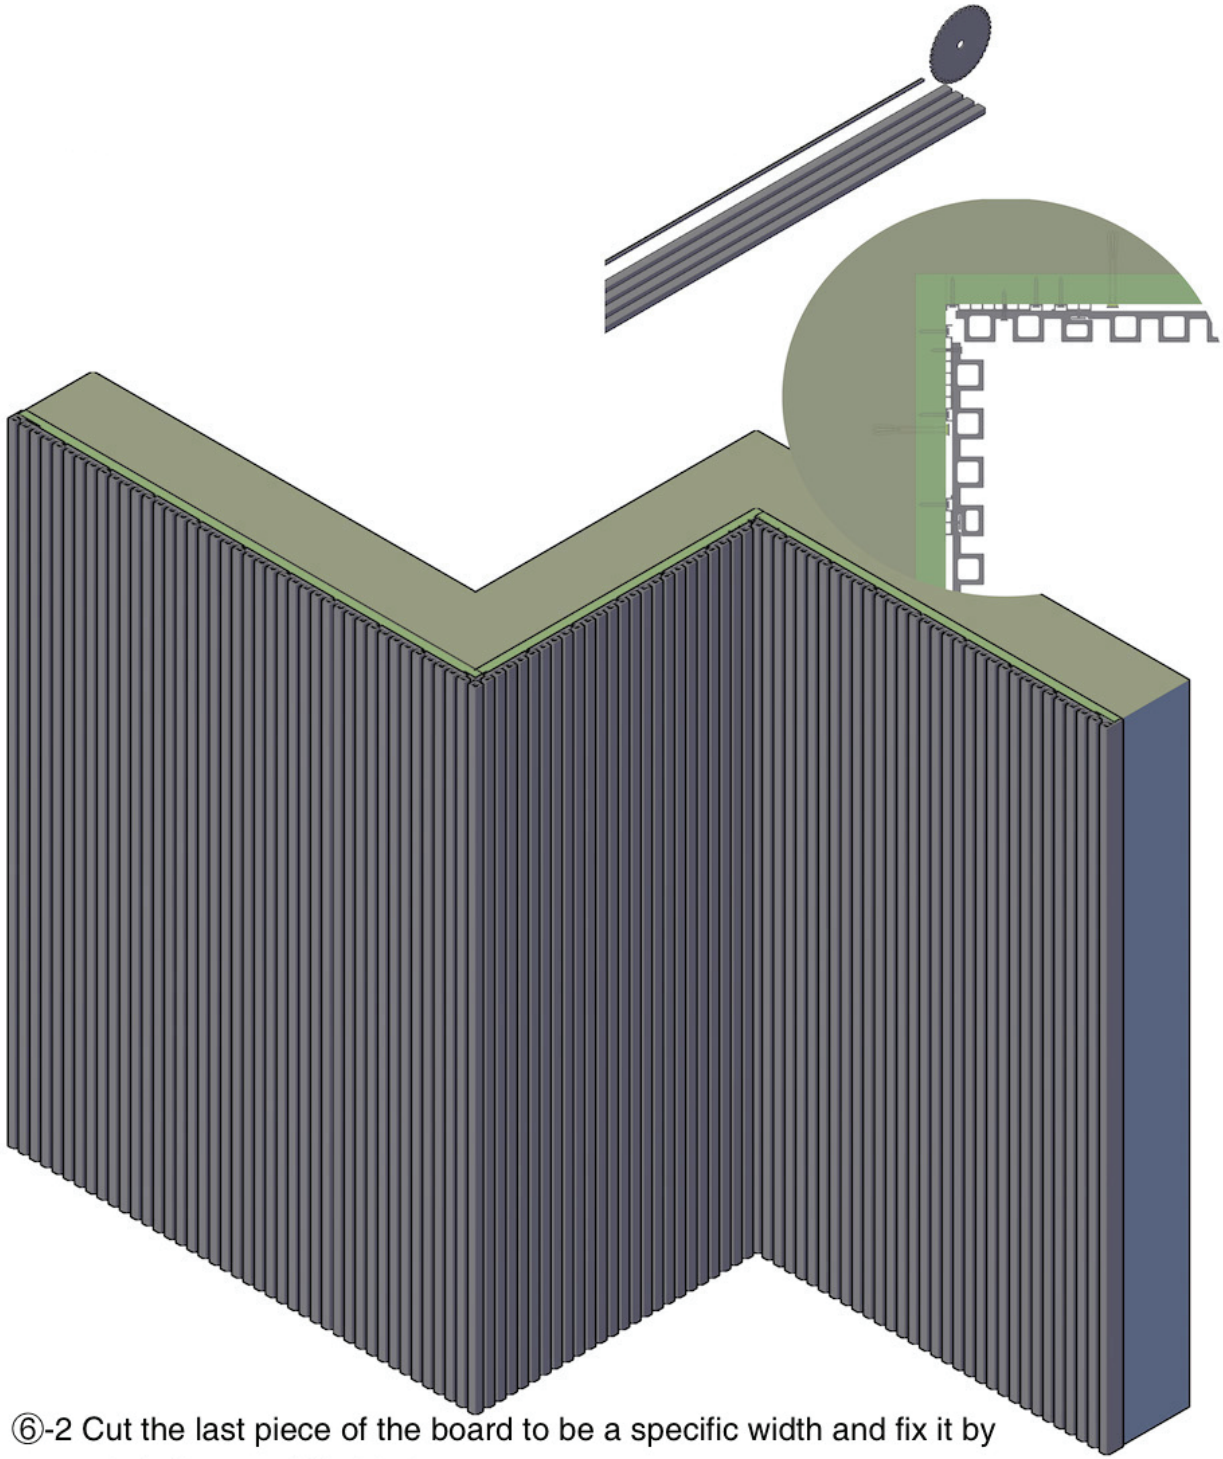

⑥-2 Cut the last piece of the board to be a specific width and fix it by screw-in to the predrilled hole.

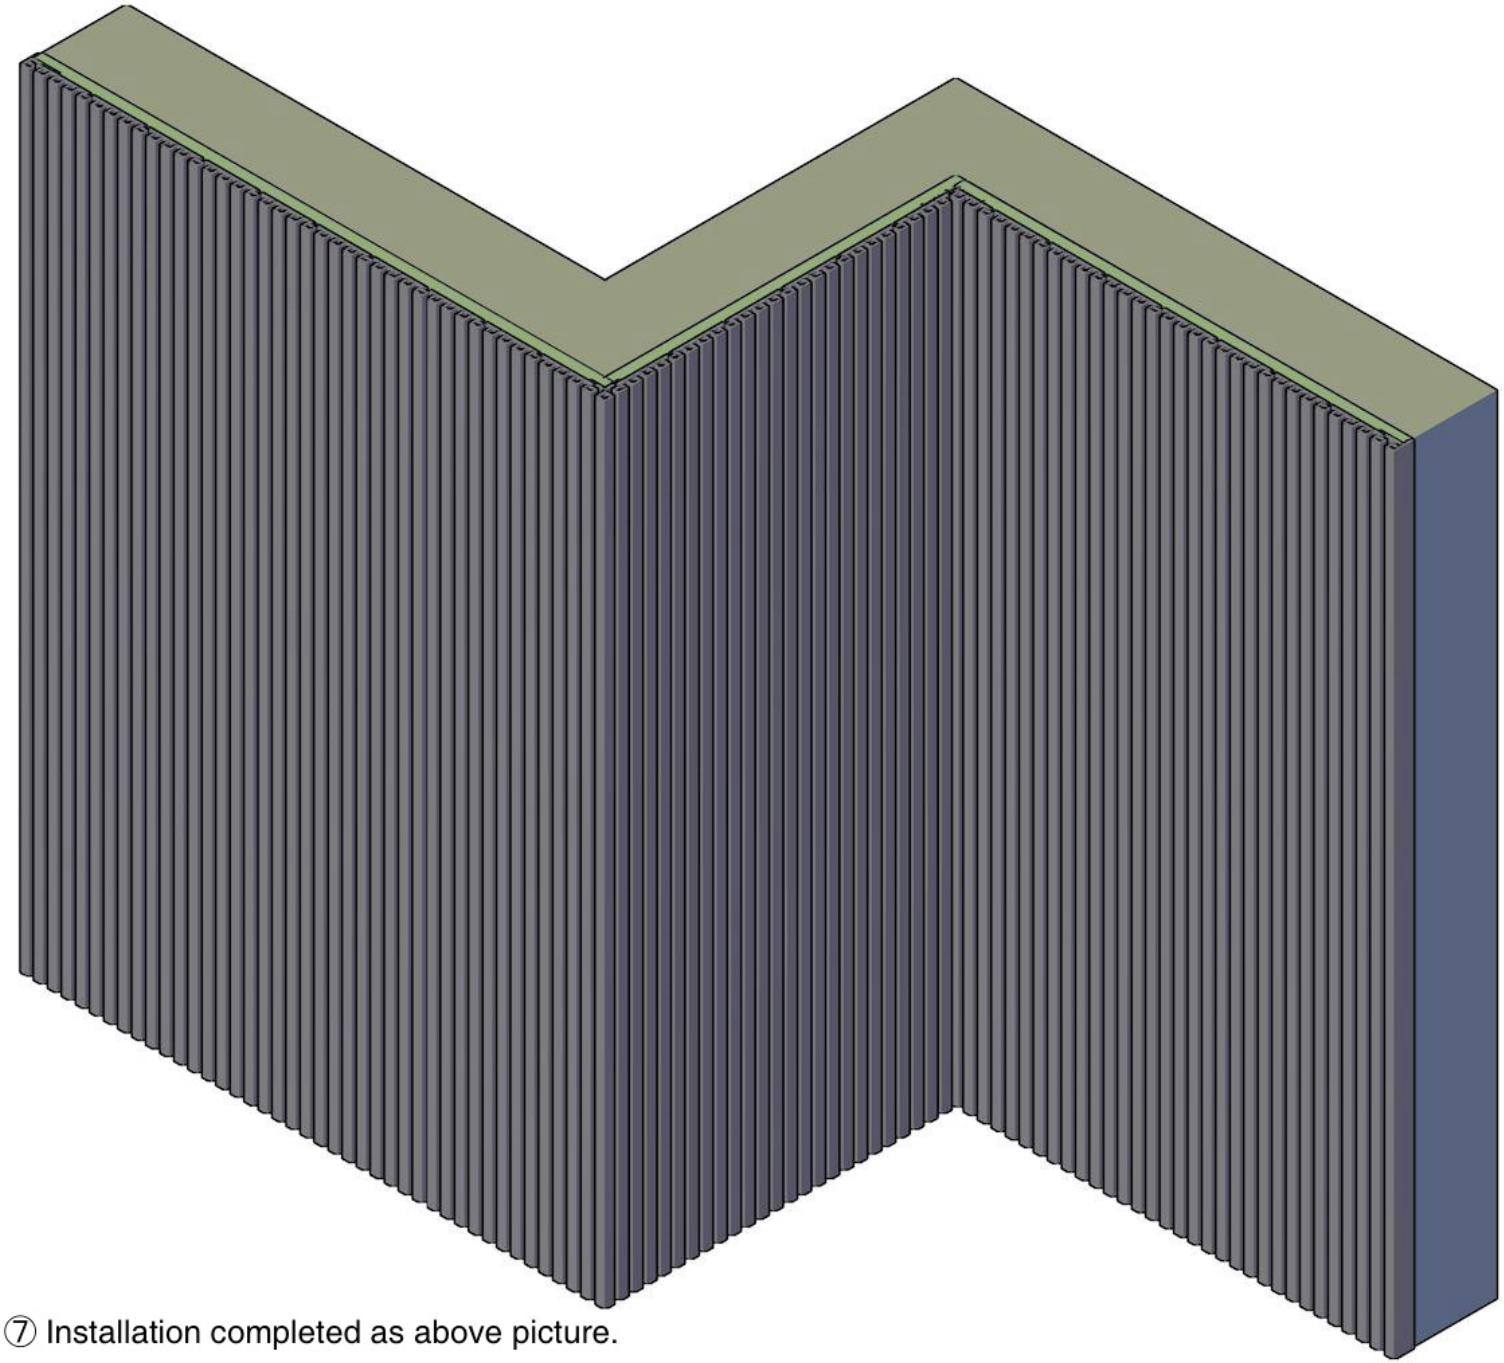

⑦ Installation completed as above picture.

NEW ZEALAND

0800 728 339
sales@paveezzi.co.nz
paveezzi.co.nz
New Zealand office
Paveezzi (NZ) limited
622a Mt Albert
Road Royal Oak,
Auckland 1023
New Zealand

AUSTRALIA

0449 731 550
sales@paveezzicomposites.com.au
paveezzicomposites.com.au
164 Hoddle Sreet, Abbotsford 3067